

Swapping the CO₂ Tank in the Stand Up 1.5 [and earlier]




Scan for videos



1. Access the Service Panel

Tap the Nutrition Facts in the bottom left of the screen. Press and hold the X in the top right, until “Service Panel Loading” appears.

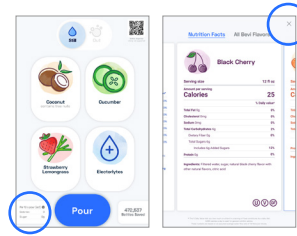


2. Open Machine Door

Use the key to open the machine door.



3. Detach and Shut off the Empty Tank

Detach the nylon strap then shut off the tank by turning the knob clockwise until it stops turning.




4. Disconnect the Hose and Remove

Using an adjustable wrench, turn the nut counterclockwise to disconnect the hose connector. Remove old CO₂ tank from the Bevi machine.



5. Connect the New Tank


With the washer between the hose and the tank, tighten connector clockwise onto the tank with hand and then with an adjustable wrench. Open the tank and reattach the strap.

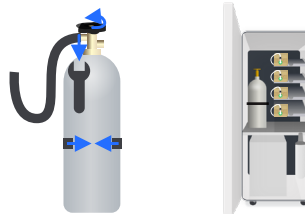

For Stand Up 1.5 units, pressure is preset. For older Stand Up units, ensure that you pressure release.

Update Service Panel

Tap the “Restock” button, select tank size, and complete the fields to ensure proper tracking of inventory. Tap the back arrow to exit Service Panel.

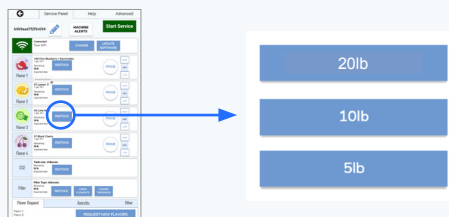

Prime Water Lines

Place a container under the dispense area. Select Sparkling then press Pour button for 30 seconds to purge any flat water out of line and confirm tank is open.

